



ZittnTec keypusher V3 usermanual

Switch on the device


Switch on the device and the remote control

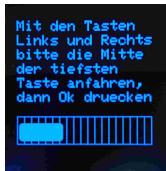

Press Left/Right to go to the middle of the first key and confirm with Ok

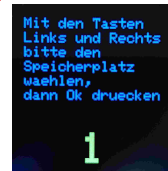

Press Left/Right to select a memory location (1-10) and confirm with Ok

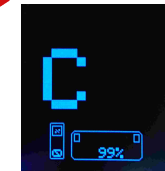

Your device is ready!

Handle and use the device

- Press Left/Right to select an organ key
- Press Tone to sound the current organ key and Octave for the current Octave
- The error message „Motor blocked“ can be resetted with Ok.
- To finetune the position of the current organ key, press and hold Ok while you adjust the position in millimeters with Left/Right.



 
Settings



- With a short press on Ok you enter the settings
- With „Tone Up“ und „Octave Down“ you can navigate the menu. The jumping distance „Sprungweite“ (semitone, whole tone, third,...) and the compressive force „Druckkraft“ can be changed by Left/Right. The adjusted compressive force remains permanently stored on the current memory location. Please select always the minimum needed force to prevent the device from falling down.
- Press Ok to select a choice and to turn on the homescreen. Jump one single semitone = *Halbton weiter*
 Finetuning infopage in German = *Feinjustierung* Reprogramming the current memory location = *Speicherplatz neu einlernen*

Reprogramming the selected memory location

Select „Speicherplatz neu einlernen“ and press Ok

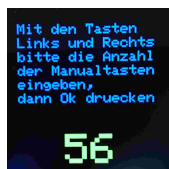

Enter the number of organ keys: „Left“ tenner, „Right“ units, confirm with Ok



Press Left/Right to go to the middle of the first key and confirm with Ok



Press Left/Right to go to the middle of the last key and confirm with Ok ready!